



LAGERSTRÖM
AVENA parasol
LED lighting strips - Mounting instructions

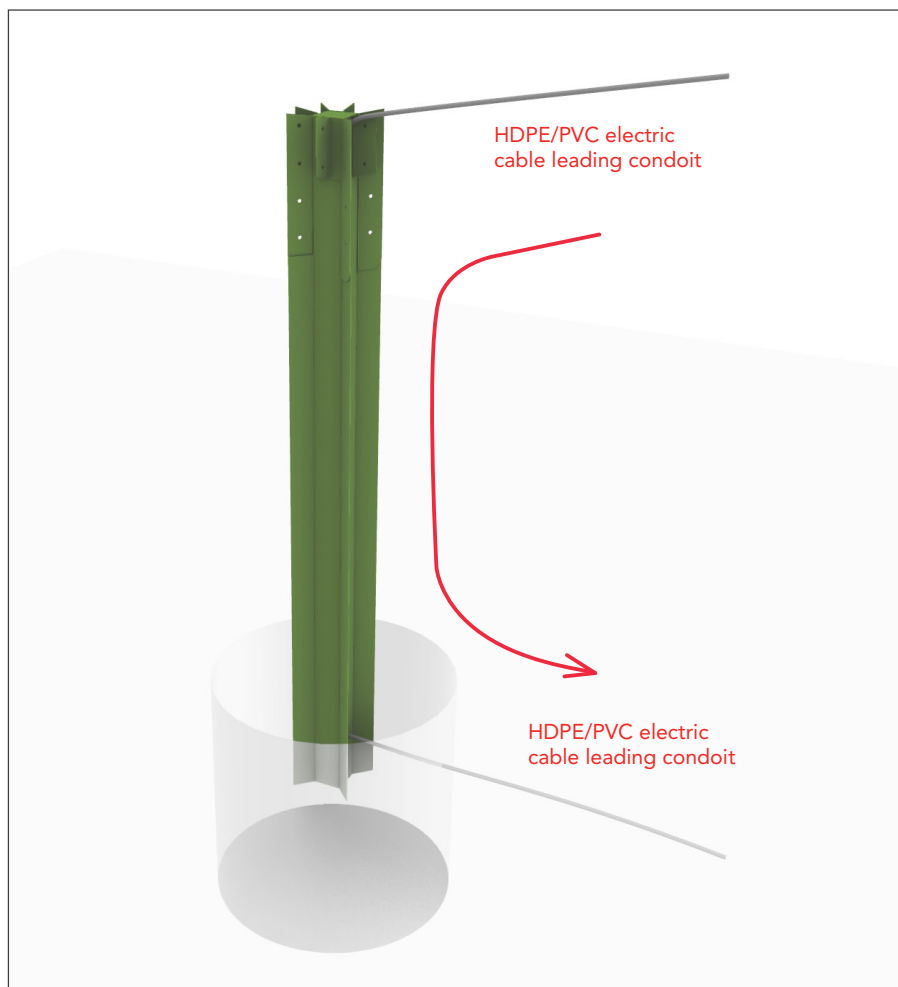


01.

To lead the electrical cables through the post, insert a **durable** plastic pipe through the top hole in the post and out through the bottom hole of the post. (This is the covering pipe that the electric cables will run through). Leave plenty of extra pipe on both ends.

IMPORTANT! The pipe must be outdoor durable as it will be subjected to weather conditions on the top end and moisture underground. Make sure it is not damaged when installed, so that water does not leak in.

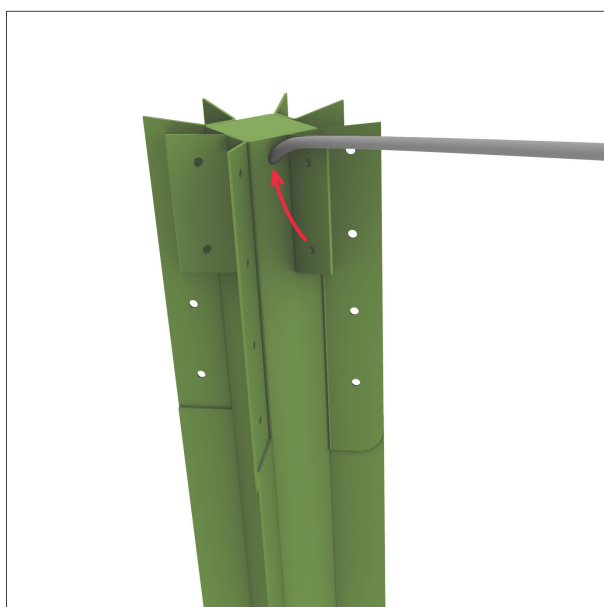

Top outlet of the electric pipe from the post

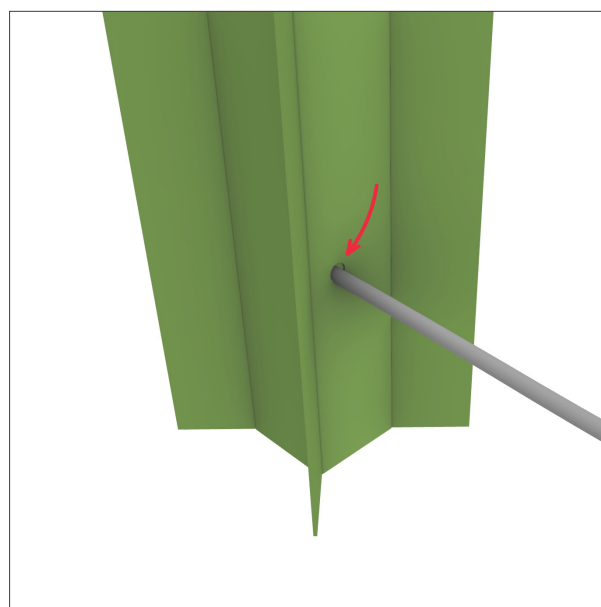

Bottom outlet of the electric pipe from the post


LAGERSTRÖM
AVENA parasol
LED lighting strips - Mounting instructions



02.


Cast the post directing the electrical tubing as you want.

Once the concrete has cured, proceed to mount all the branches and roof segments as explained in the Avena mounting instructions.

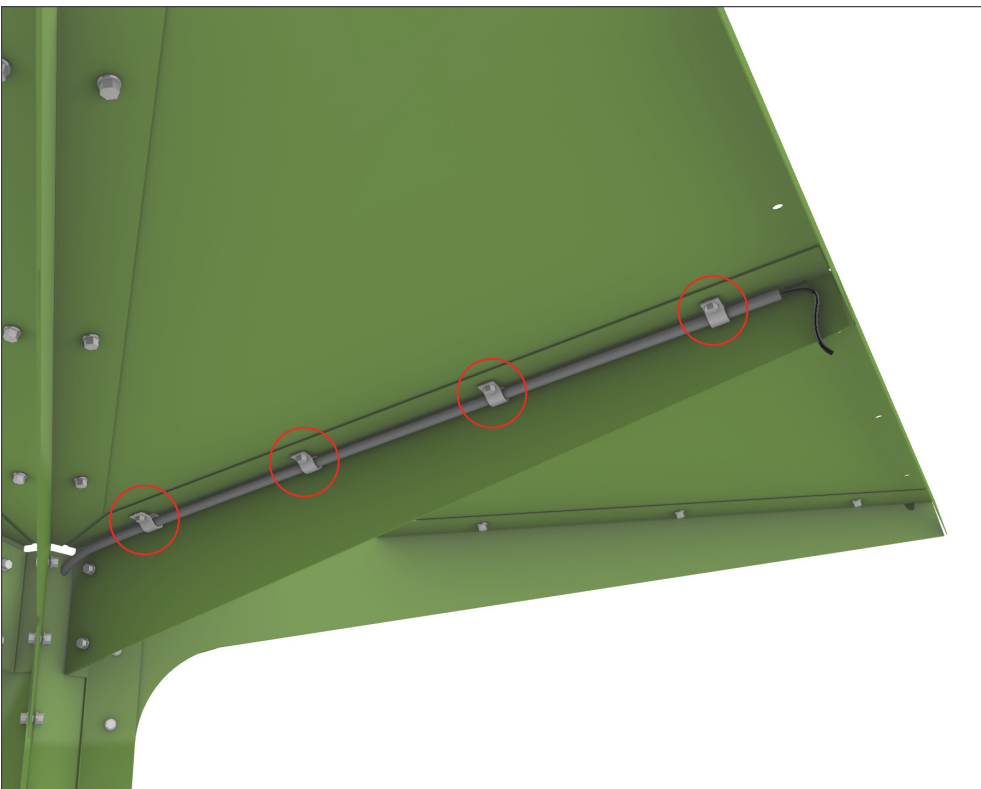

You can use the M10 bolts and nuts holding the roof section to attach the electric pipe. See image.


LAGERSTRÖM
AVENA parasol
LED lighting strips - Mounting instructions

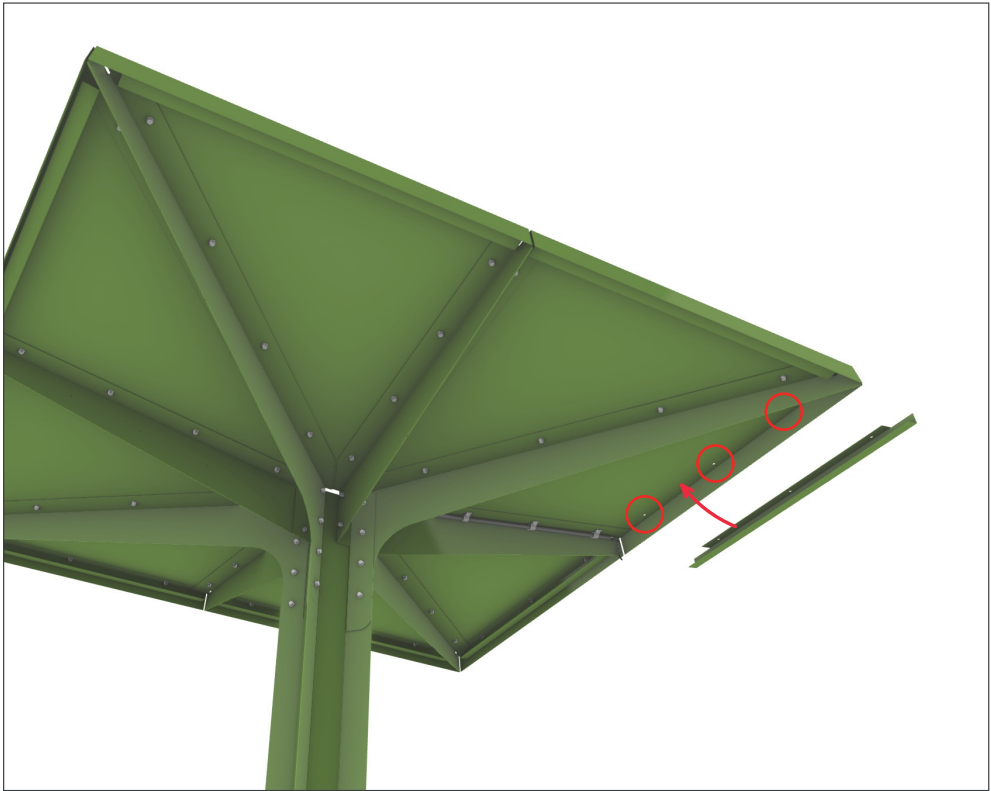

03.


Attach the 8 profiles that will house the LED strips.

Each profile connects to one roof section with 3st M10 bolts.

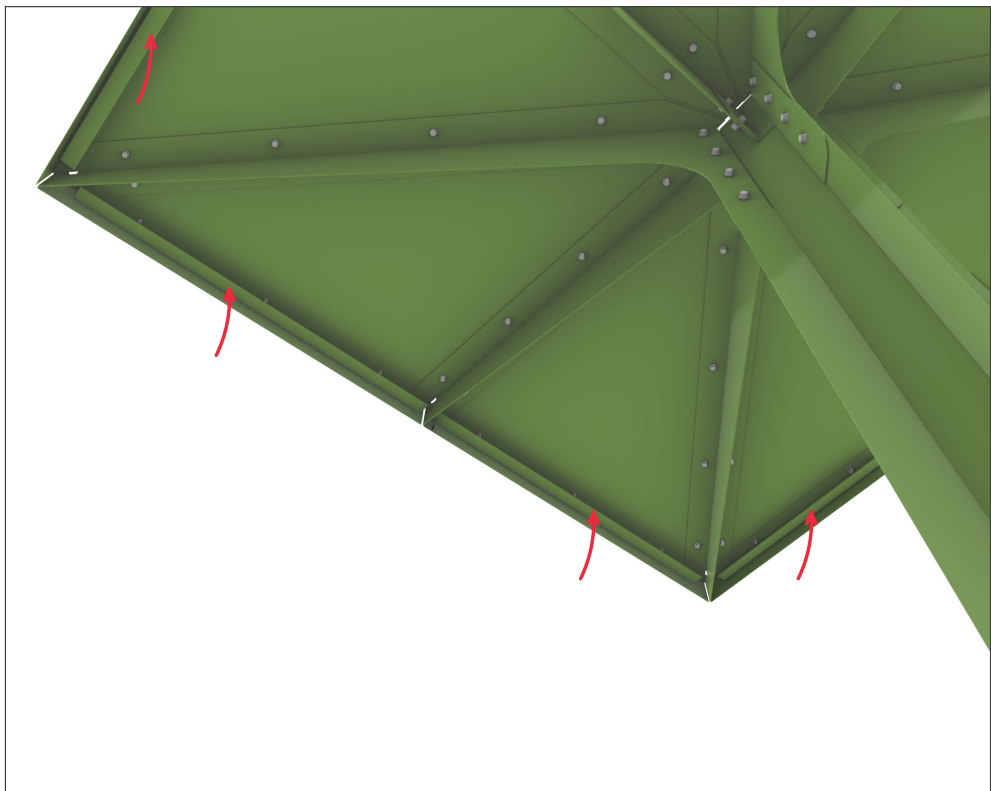

View from below:
Profiles mounted to the outer edges of the roof.


LAGERSTRÖM
AVENA parasol
LED lighting strips - Mounting instructions

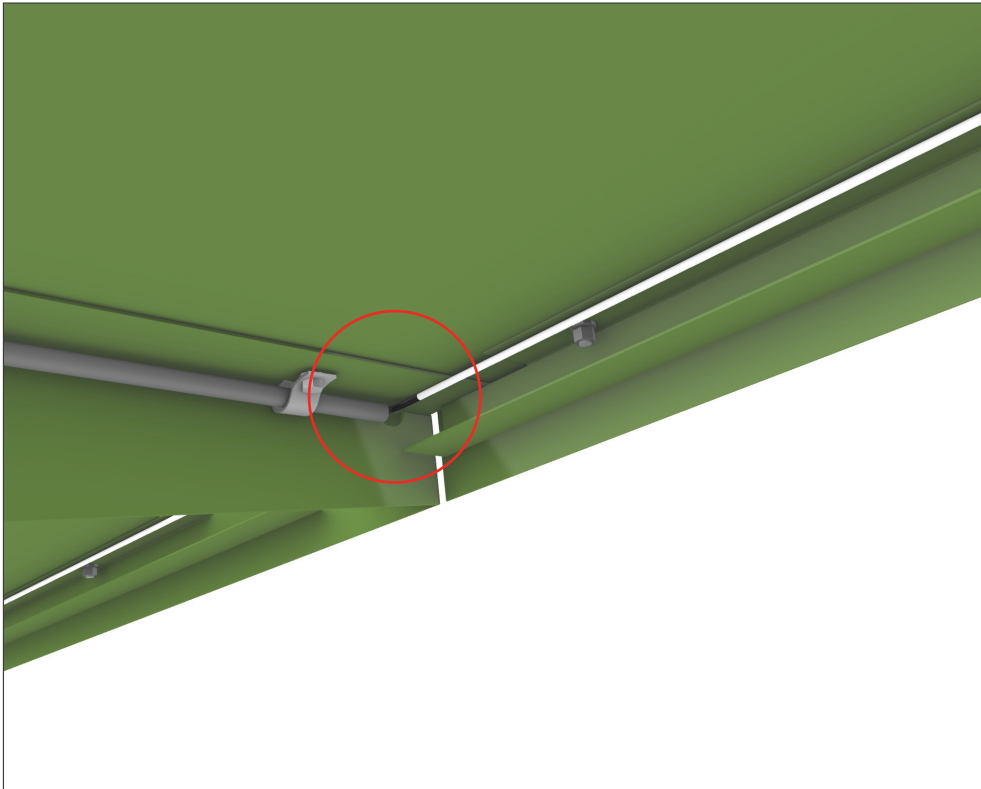

04.

Connect the electric cables and attach the LED strips in the profiles as you want, using the adhesive layer.

There are half-circle holes in the parasol branches to lead the lighting strips and cables through. (in the red circle in the image)

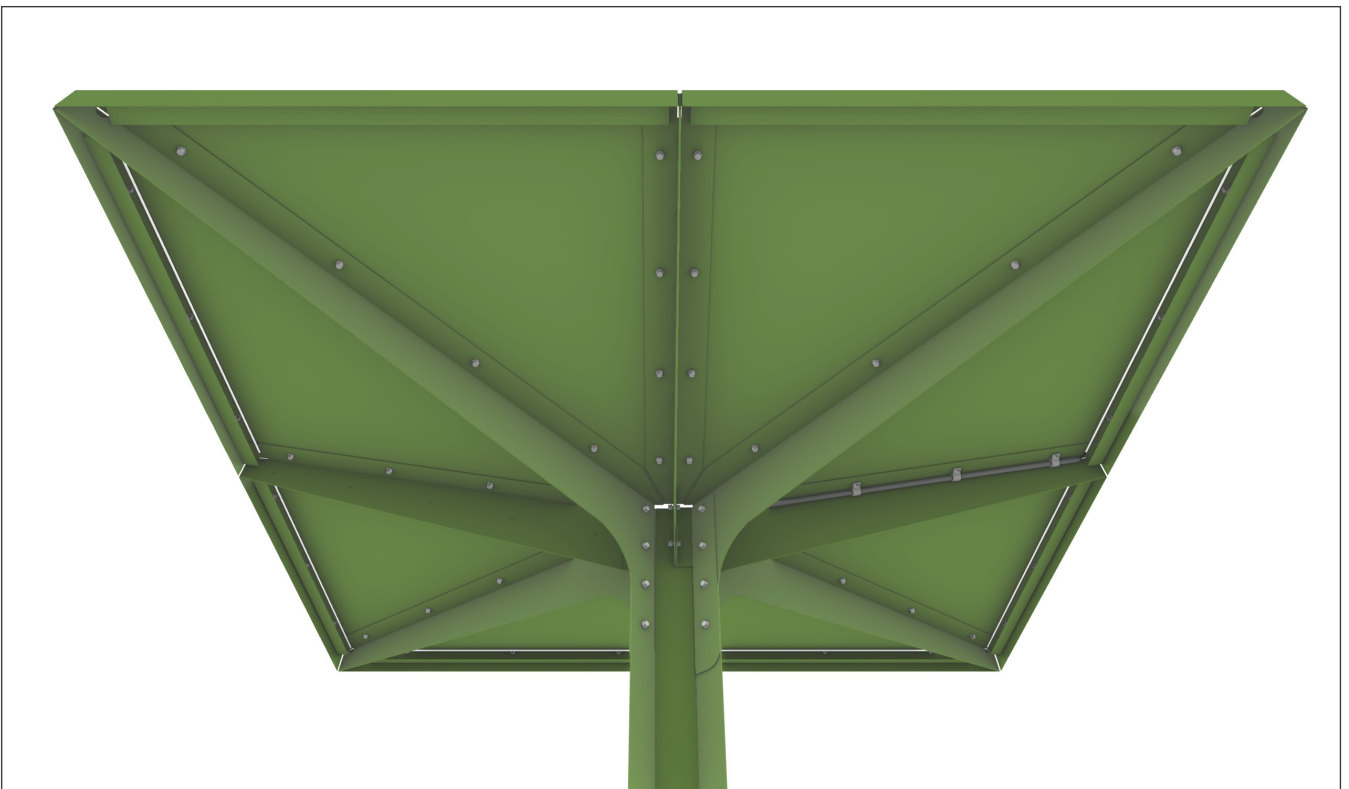

Lighting strips mounted