


## Lagerström

### Dráp D'or Soffa - Cast on site version

#### Casting instructions

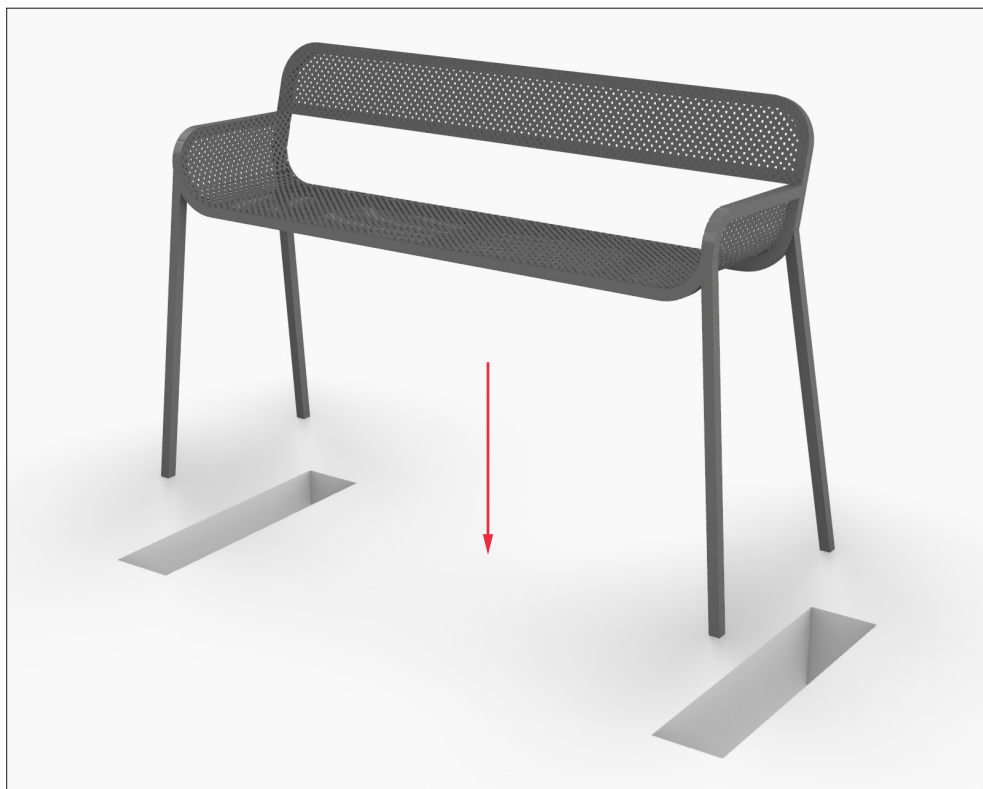

#### 01.

Prepare 2 holes for casting the bench in the chosen position.


Minimum dimensions for each hole:

Width 20cm

Length 90cm

Depth 50cm

See illustration below.

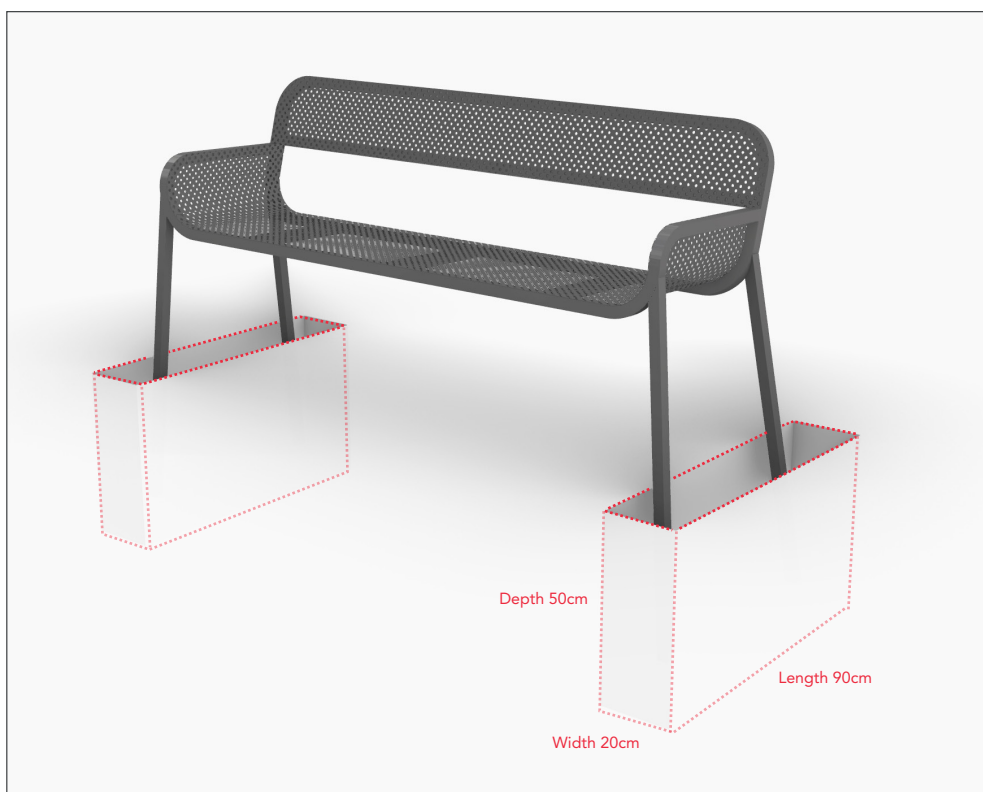


#### 02.

Place the bench in the holes.

## Lagerström

### Dráp D'or Soffa - Cast on site version

#### Casting instructions

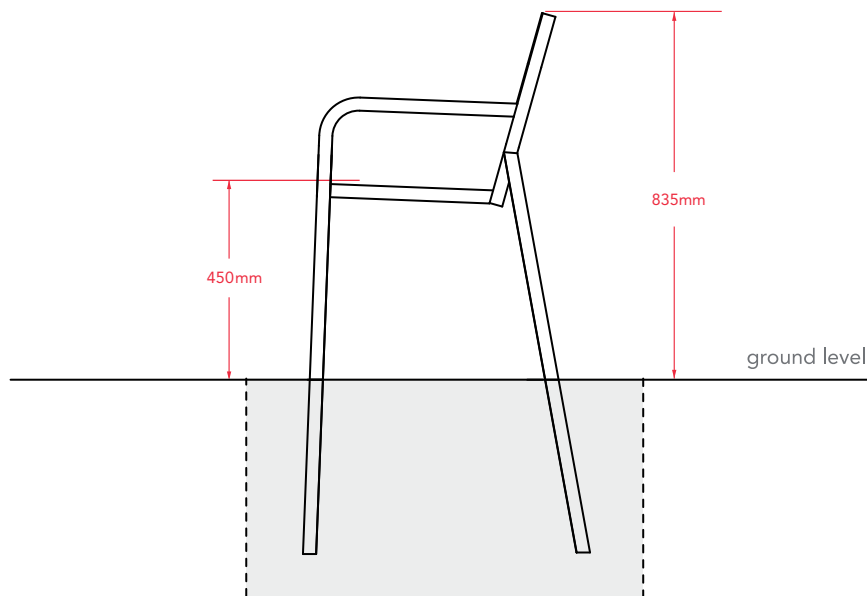

#### 03.

Adjust the positioning of the bench and secure in place with (wooden) supports.

Make sure the seat is not leaning towards one side when viewing from the front.

The angle of the seat from the side view should be as shown in the illustration.

#### Important!

make sure the seat height is 450mm and the backrest height is 835mm over the ground level.



#### 04.

Cast concrete in both holes. Remove supports after drying.

Level the holes with soil if needed.