

LAGERSTRÖM
IVY 240 parasol
Mounting instructions




01.

Screw the post cover into position.

(Important to do this at this stage, as the top of the parasol canopy is not accessible after mounting the canopy segments)


Place the parasol parts on a soft surface to avoid damage to the paintwork.

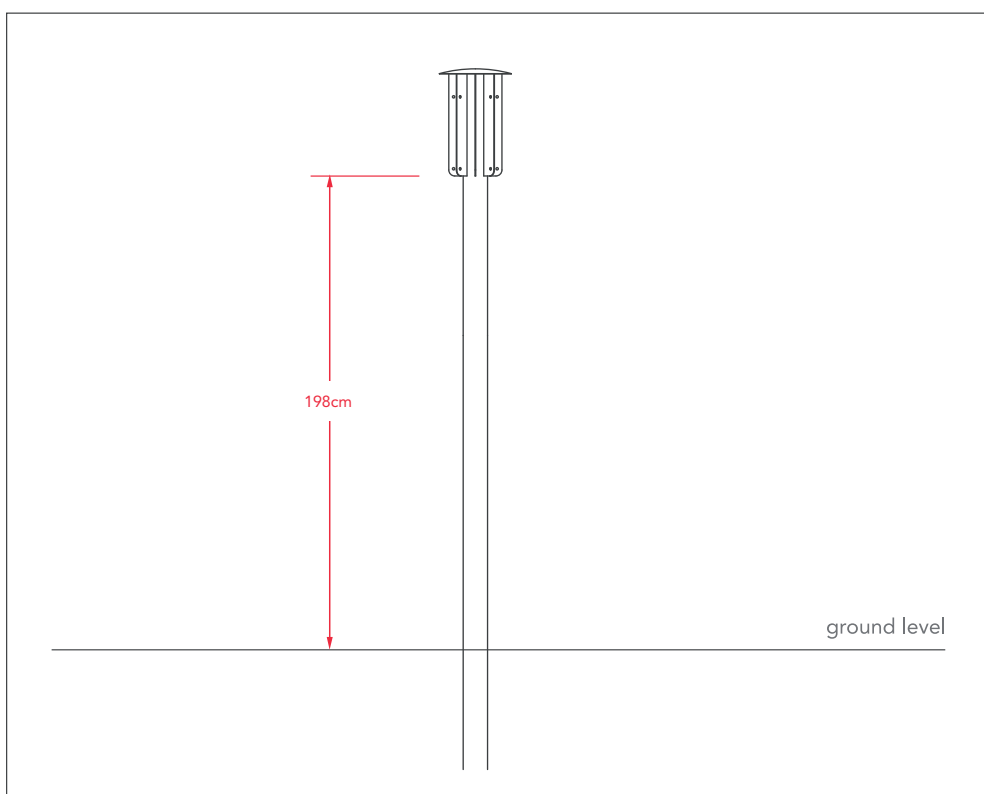

02.

Cast the post into the ground according to page 2 instructions. Make sure the lowest point of the post ribs is 198cm over the ground level! (as shown in illustration)


LAGERSTRÖM
IVY 240 parasol
Mounting instructions

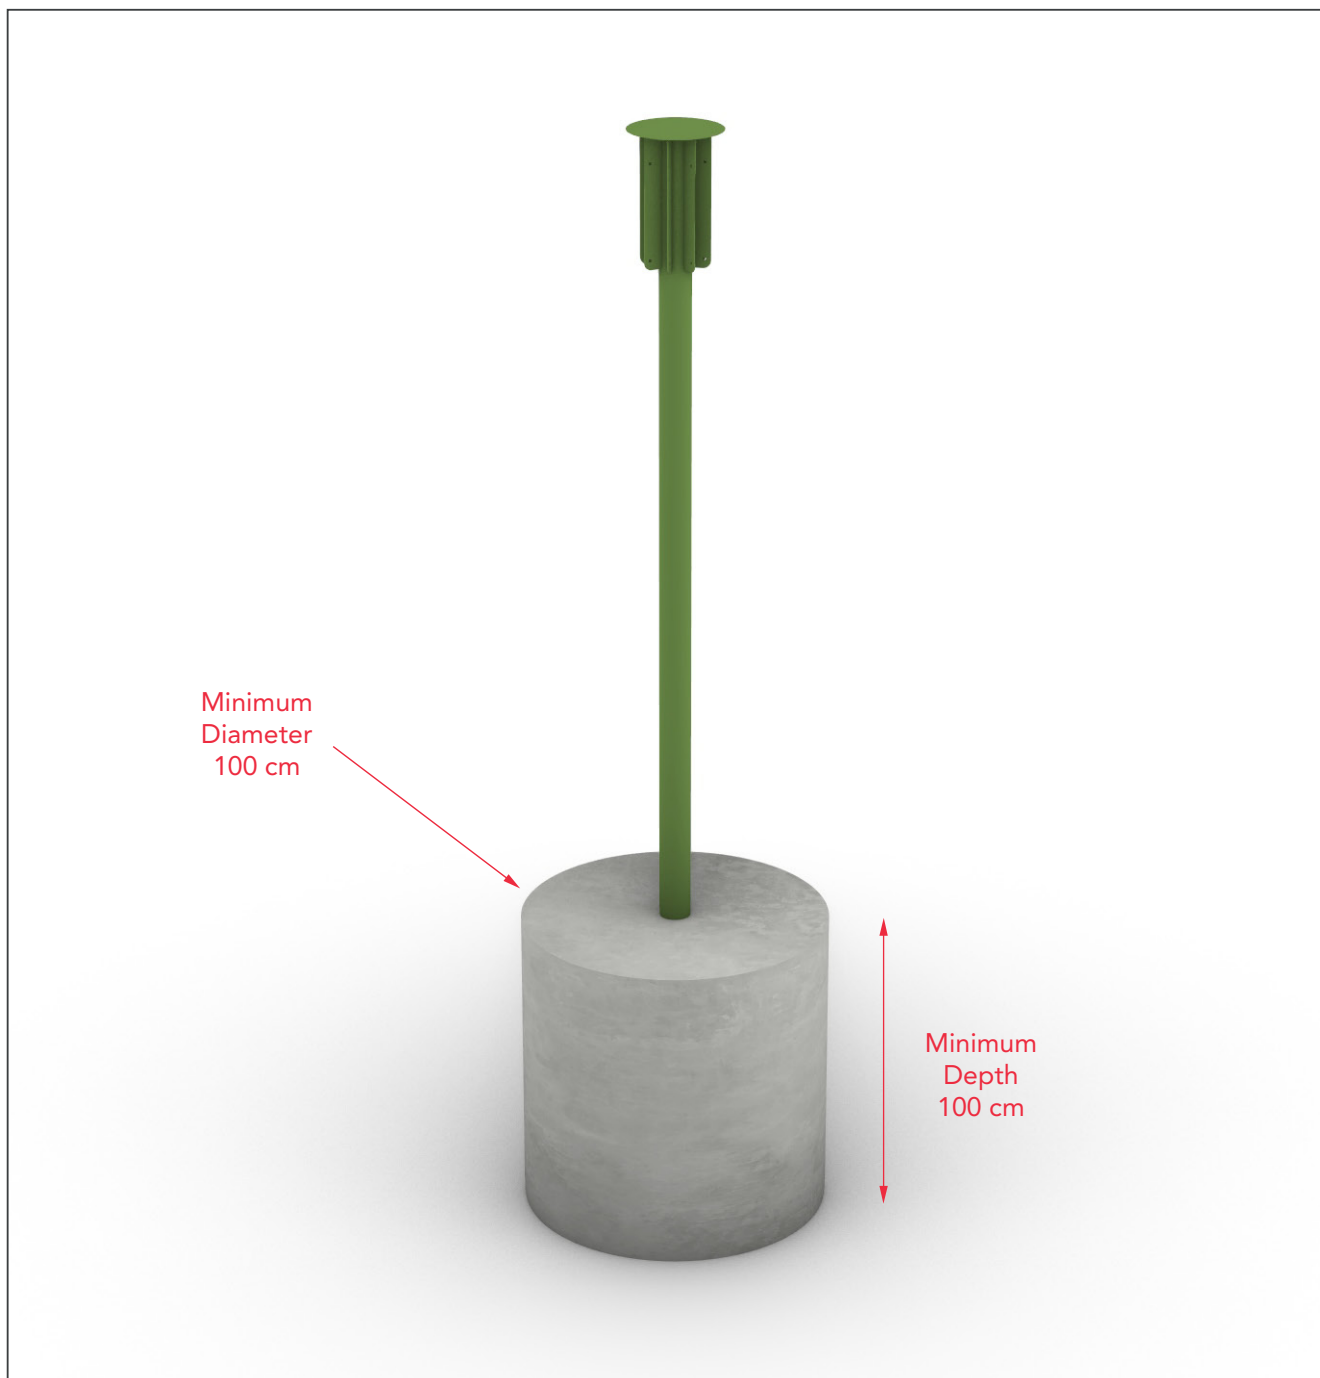

02.

To ensure stability it's important to cast the post so that the concrete foundation is at least 100cm in diameter and 100cm deep.

LAGERSTRÖM
IVY 240 parasol
Mounting instructions

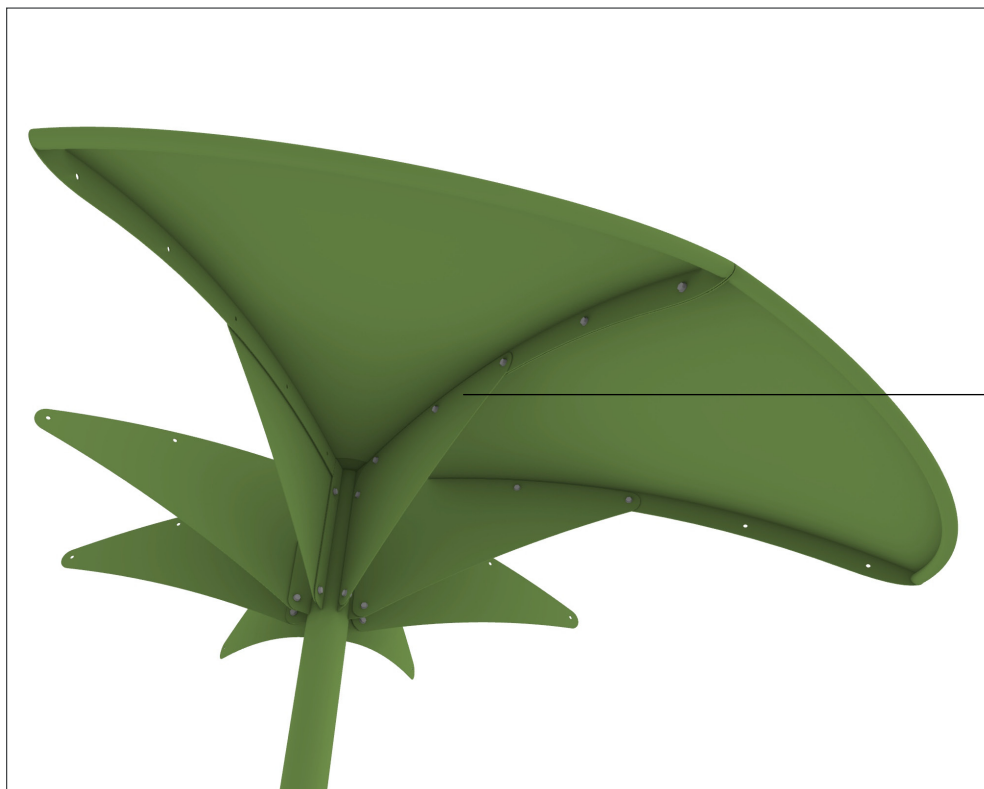


04.

Attach the canopy segments.
3 bolts to every wing.


Connect the segment walls on
the right side of the triangular
wings! Same side for all the
wings! See illustration below.

Important! Don't tighten the
bolts all the way - leave them
a bit loose!

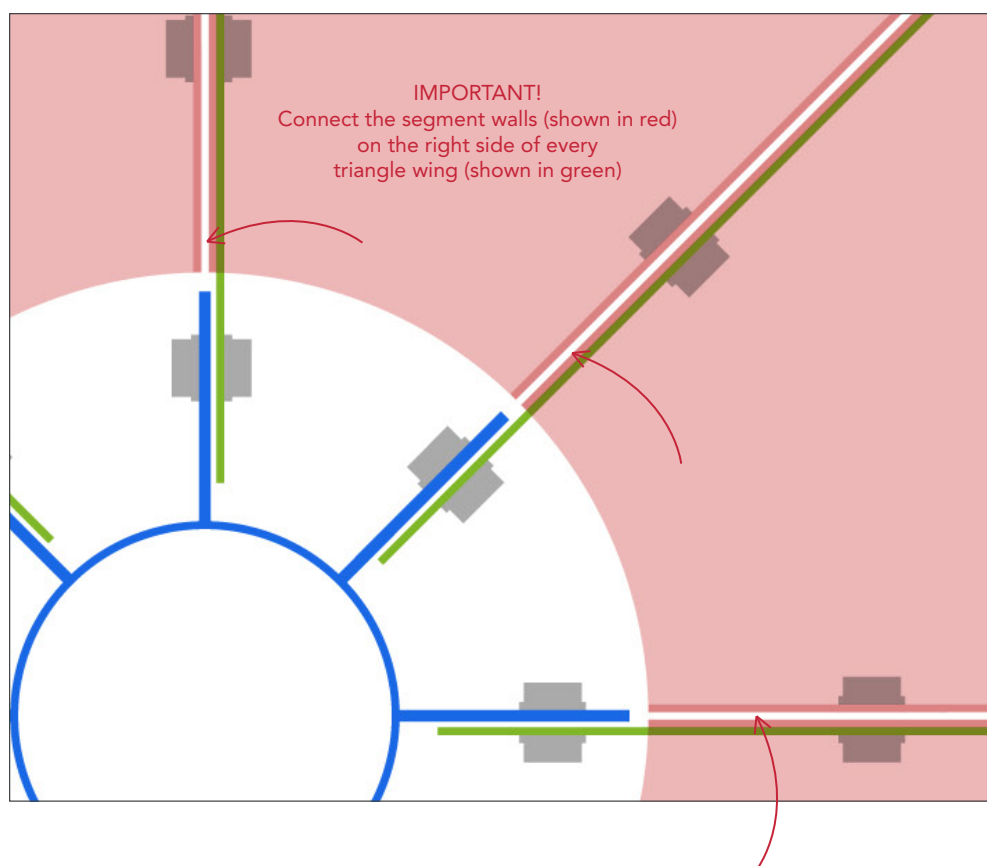

Connect the 8 canopy
segments to the wings as
shown here.

LAGERSTRÖM
IVY 240 parasol
Mounting instructions

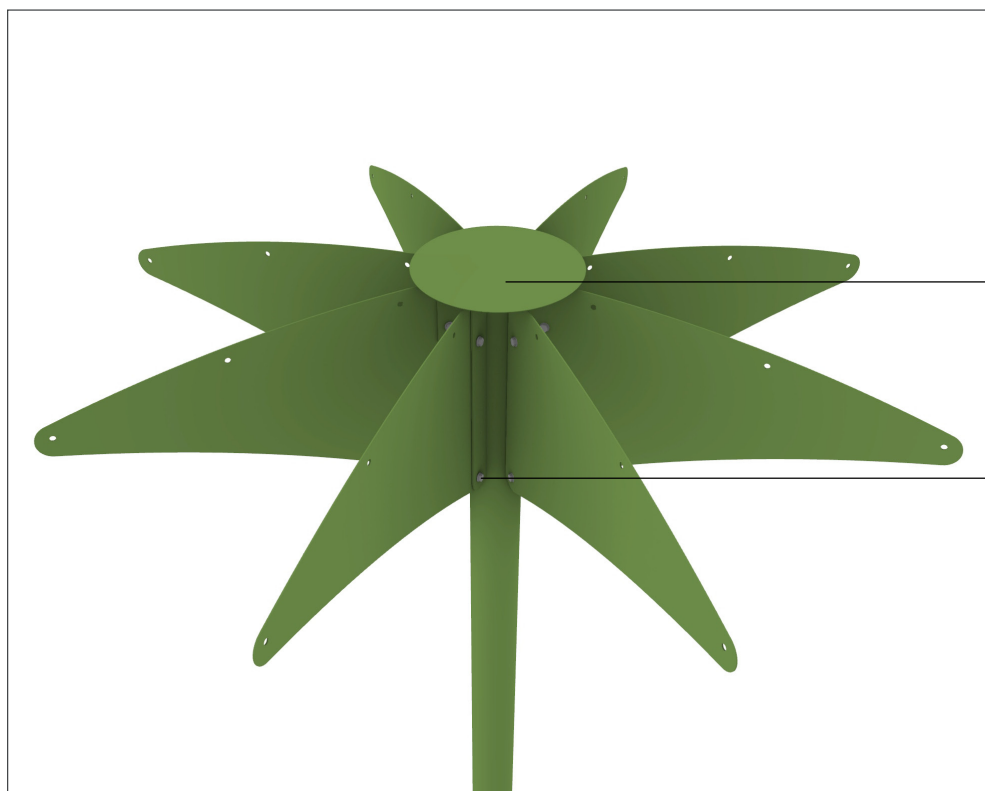


03.

Connect the 8 support wings to the center post.


Connect all wings on the left side of the post ribs! Same side for all the ribs! See illustration bellow. Each wing with 2 bolts.

Important! Don't tighten the bolts all the way - leave them a bit loose!

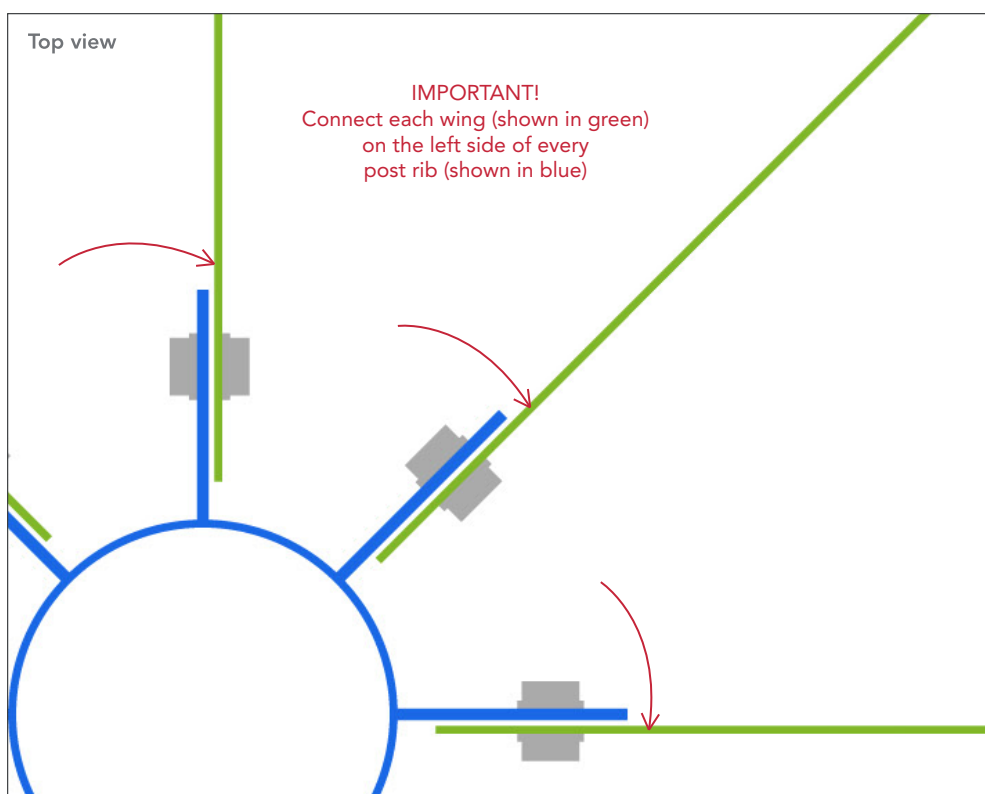


Connect the 8 triangle wings to the post as shown here.

LAGERSTRÖM
IVY 240 parasol
Mounting instructions

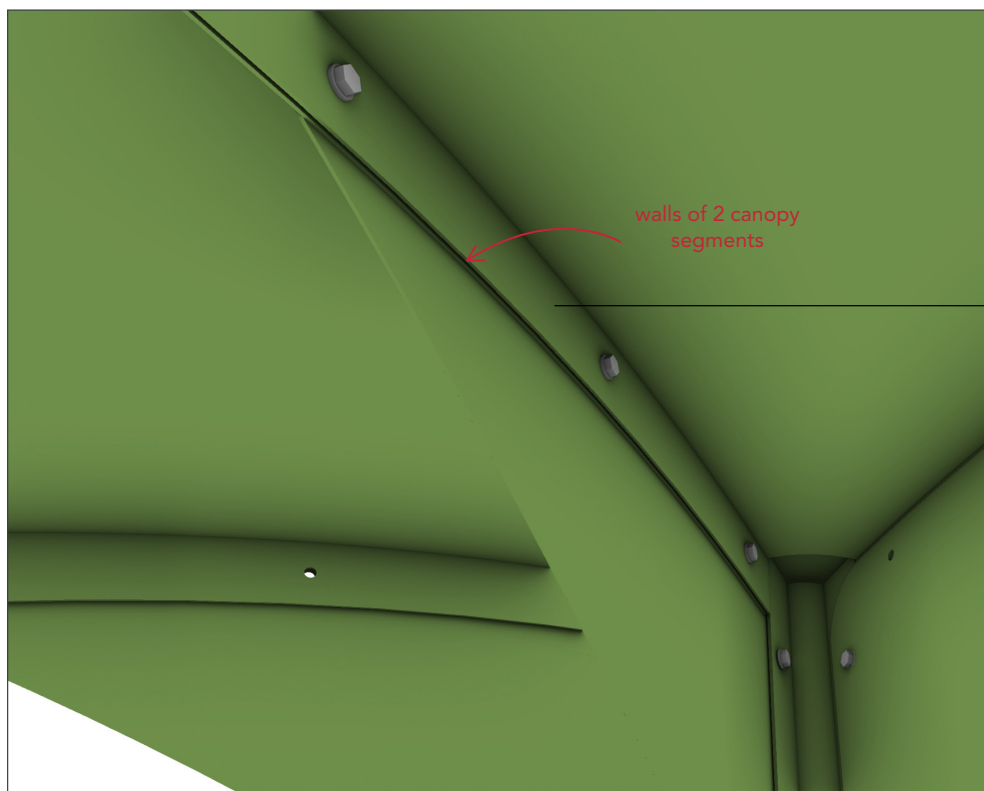

05.

Both vertical walls of the 2 adjacent canopy segments must be placed on the right side of the support wing, then connected to the wing with 3 bolts - as shown here.

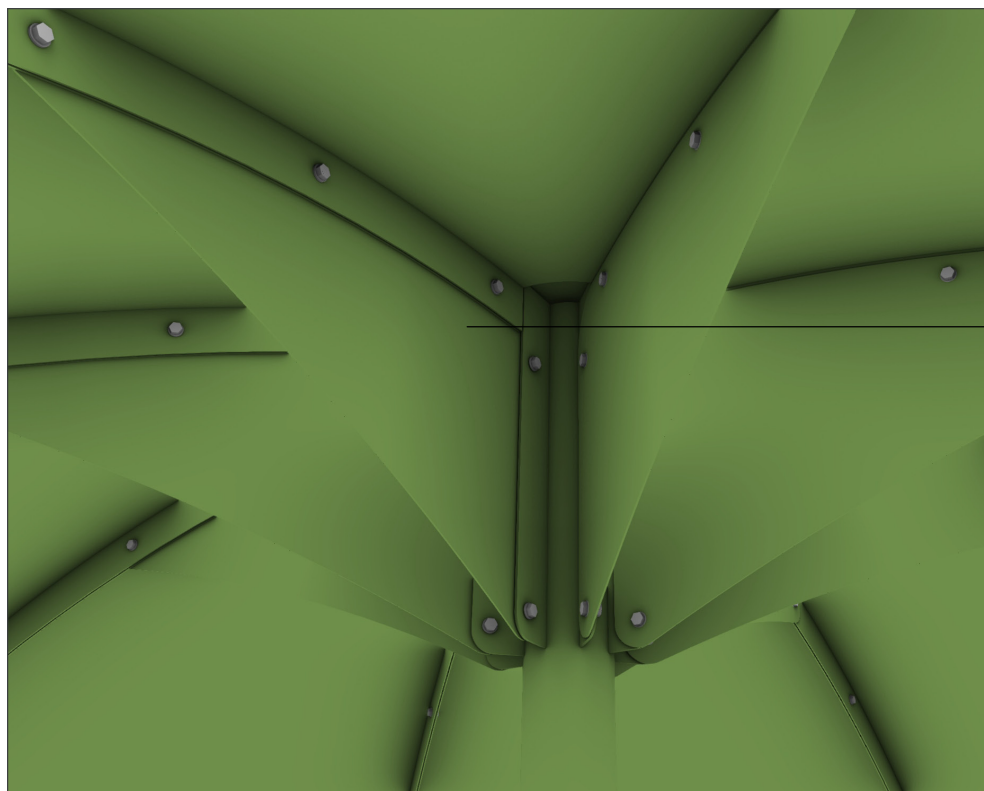

Connect all canopy segments and tighten the bolts.

After the assembly, under the canopy should look like this.

LAGERSTRÖM
IVY 240 parasol
Mounting instructions

